

SmartClass™ E1/Datacom

E1 Service Installation and Maintenance Tester



Key Features

- Performs E1/Datacom service installation and maintenance in easy-to-use, lightweight, and rugged form-factor
- Significantly reduces field technician training with Smart AutoConfiguration (AutoConfig) feature
- Works with PC software—download results for report preparation
- Provides additional E1 and Datacom testing with available software options
- Includes Event Log and Histogram for troubleshooting
- Capable of bidirectional monitoring and troubleshooting via dual E1 ports
- Offers color graphical user interface (GUI) available in multiple languages
- Supports G.703 Codirectional, Contradirectional, and Centralized interface testing

Applications

E1

- Provides terminate, monitor, bridge, and local loopback modes
- Provides G.703 — 2 Mb/s testing
- Conducts 2 M (Bulk), n x 64 kb/s BERT
- Measures performance G.821, G.826, and M.2100
- Provides audio monitor (VF drop)
- Provides transmit frequency offset
- Performs VF level and frequency measurements, VF tone insert
- Measures E1 signal level measurement
- Provides ABCD/Sa monitoring
- Provides round-trip delay
- Offers alarms (defects) and errors (anomalies) insertion
- Pulse shape (optional)
- MFC-R2 (optional)


Datacom

- Offers DTE emulate, DCE emulate, and monitor mode
- Interfaces with X.21, V.24 (RS-232), V.35, V.36 (RS-449), and EIA-530
- Provides round-trip delay
- Frame Relay (optional)
- Conducts G.703 Codirectional, Contradirectional, and Centralized interface testing

Others

- Provides VT-100 terminal emulation (optional)
- Offers remote control (optional)

The JDSU SmartClass E1 is a handheld field tester for the installation and commissioning of E1 and Datacom service that offers multiple test modes for E1 and Datacom signal analysis. An economical and easy-to-use point solution, the SmartClass E1 has a Smart AutoConfiguration (AutoConfig) feature and large, easy-to-read color display that make the lightweight, rugged, battery-operated tester ideal for both service provider and contractor field technicians. It also meets the needs of mobile operators in the construction of E1 backhaul infrastructure.

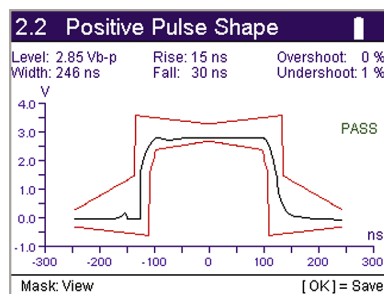

Pulse shape for extra E1 testing capability

Specifications

E1 Circuit Testing

Interfaces

Dual RJ48 ports (port 1 Rx/Tx, port 2 Rx only)

120 balanced RJ48 (by default)

120 balanced CF, 75 unbalanced BNC (via adapter cable)

Line Code AMI, HDB3

Tx Timing Internal

Recovered

External (via adapter cable on Port 2)

Tx Frequency Offset ± 100 ppm in 1 ppm intervals

Framing Unframed, PCM31, PCM31C, PCM30, PCM30C

Test Mode Terminate, monitor, bridge, local loopback

2M (Bulk), n x 64 kbps BERT

AutoConfig for framing and test pattern

LED Indicators SYNC, ALARM, ERROR, DATA, LPBK, BATT

Performance Monitoring

G.821, G.826, and M.2100

ABCD/Sa monitoring

Round-trip delay

Test Patterns

All ones, All zeros

1:1, 1:3 (1 in 4), 1:4 (1 in 5), 1:7 (1 in 8),

63 (2⁶⁻¹), 511 (2⁹⁻¹), 2047 (2¹¹⁻¹), ITU INV2¹⁵⁻¹, ITU2¹⁵⁻¹, ITU

INV2²⁰⁻¹, ITU2²⁰⁻¹, ITU INV2²³⁻¹, ITU2²³⁻¹, QBF, QRSS, LIVE

User bit pattern (3 to 32 bits)

User byte pattern (1 to 64 bytes)

Key Results

Loss alarms, LOS seconds

code error count, code error rate, timing slips, frame slips,

LOF alarms, LOF seconds, AIS alarms, AIS seconds, RDI alarms

RDI seconds, MF AIS alarms, MF AIS seconds, MF RDI alarms,

MF RDI seconds

FAS bit error count, FAS bit error rate, FAS word error count,

MFAS word error count, MFAS word error rate, CRC error Count,

CRC error rate, CRC sync loss count

FAS sync loss count, MFAS sync loss count, remote end block

error (E-Bit/REBE), NFAS word, MFAS word, NMFAS word

Si bit, A bit, Sa-bit sequence (Sa4–Sa8)

TSE/bit error count, TSE/bit error rate, block error count

pattern slips, pattern slip seconds

pattern synchronization loss count, pattern synchronization

loss seconds, round trip delay (μ s), elapsed time, time,

date/time-slot Rx byte, time-slot signaling data

Errors (Anomalies) Insert

2M code Single

2M FAS Single, 2, 3, 4

2M MFAS Single, 2

2M CRC Single

BERT pattern slip Single

E-Bit/REBE Single, Continuous

Bit (TSE) Single-rate 1e-2, 1e-3, 1e-4, 1e-5, 1e-6, 1e-7,

Multiple 1 to 50

Alarms (Defects) Insertion

LOS Continuous

Loss of frame (LOF) Continuous

AIS

RDI / FAS Dist

MF AIS

MF RDI / MFAS dist

VF Tests

VF level and frequency measurement

VF tone insert 404, 1004, 2713, 2804 Hz,

-13.0, -3.0, 0.0, 3.0 dBm

VF drop to built-in speaker

Pulse Shape (optional)

Parameter Specification

Results Pulse shape graph

G.703 mask Pass/Fail

Pulse width resolution 2.75 ns

Rise time resolution 1 ns

Fall time resolution 1 ns

Undershoot resolution 1% of nominal level

Overshoot resolution 1% of nominal level

Signal level in [V] base-peak

MFC-R2 (optional)

Test Mode Monitor, Simulate (Call in or out)

Country selection ITU-T, Brazil, Mexico, and India

Datacom Circuit Testing

Interfaces

X.21, V.24 (RS232), V.35, V.36 (RS449), and EIA-530

via adapter cable

G.703 Codirectional, Contradirectional, and Centralized

Interface testing via adapter cable

Data Rates (Emulate and Monitor)

X.21 Sync 50 bps to 10 Mbps

V.24 (RS-232) Async 50 bps to 128 kbps

V.24 (RS-232) Sync 50 bps to 128 kbps

V.35 Sync 50 bps to 2048 kbps

V.36 (RS-449) Sync 50 bps to 10 Mbps

EIA-530 Sync 50 bps to 10 Mbps

BERT Patterns

All Ones, All Zeros,

1:1, 1:3 (1 in 4), 1:4 (1 in 5), 1:7 (1 in 8), 3:1, 7:1,

63 (2⁶⁻¹), 511 (2⁹⁻¹), 2047 (2¹¹⁻¹), 2047R, 2047R INV, 2¹⁵⁻¹

(ANSI, ITU), 2²⁰⁻¹ (ANSI, ITU), 2²³⁻¹ (ANSI, ITU), QRSS, QBF, Delay

User Bit Pattern (3 to 32 bits)

User Byte Pattern (1 to 64 bytes)

Transmit Clock Sources

Internal ± 3 ppm, 1 ppm per year aging

Interface

Signaling Lead Control

Emulate DTE

RTS, DTR, LL, RL

Emulate DCE

CTS, DSR, DCD, TMA

Monitor

Self Loop

Internal

External Cable Test

Result Categories

Summary, Clock, BERT, Data, Control Signal, G.821, Time

Specifications

Frame Relay (optional)

Interface	Datacom
Test Mode	Terminate and Monitor (UNI-U, UNI-N, NNI)
Link Management	Auto-Detect (default setting), ANSI T1.617 Annex D, ITU-T Q.933 Annex A, LMI Rev 1, None
DLCI	0 – 1023
Link Trace	Simple, Verbose, Text, Hex, Text, and Hex
Long Frame	5 – 9999

Load Test

Test of CIR (load)	Off, Fixed, Burst, Ping
CIR Fixed Rate	1 – 10,000 kbit/s
Frame Lengths	5 – 9999
Payload	Sequence, User 1, User 2, Sequence + User
Control Bits	FECN, BECN, DE, C/R
Burst Settings	Tx time, Idle time

Ping

Settings	Source IP Address, Destination IP Address, Inverse ARP, Ping Length
----------	---

Encapsulation	NLPID, Ethertype
---------------	------------------

Result Categories

Frame Relay (DLCI, Link, Ping, LMI, DLCI List, Trace) and Datacom

Other Software Options

VT-100 (optional)

This option enables the instrument to emulate a VT-100 terminal and to connect to network device via instrument 9-pin RS232 interface.

Remote Control (optional)

Lets the user use command lines to control the tester via serial interface. Command guide is available with the option.

General Specifications

Languages

English, French, German, Italian, Japanese, Korean, Portuguese, Russian, Simplified Chinese, and Spanish

Power

4 AA field-replaceable batteries (NiMH or Alkaline)
NiMH battery operating (at 25°C) under typical conditions provides up to 5 hours of continuous use for E1 application and 2 hours of continuous use for Datacom application
Supports sleep mode

AC line operation via external adapter

Charging time (at 25°C) under typical conditions for empty to full charge: with unit OFF up to 5 hours; with unit ON up to 7 hours

Permissible Ambient Temperature

Nominal range of use 0 to +50°C

Storage and transport –10 to +60°C

Humidity

Operating humidity 10 to 90%

Physical Specifications

Size (H x W x D)	230 x 120 x 50 mm
Weight, including batteries	<1 kg (2 lb)
Display	320 x 240 color display

CE Marked

Ordering Information

Order Number

CSC-E1DC-P1	SmartClass E1 Datacom Package (No software options included)
CSC-E1DC-P2	SmartClass E1 Datacom Pulse Shape and Frame Relay Package (Pulse Shape and Frame Relay software option included)
CSC-E1DC-P3	SmartClass E1 Datacom Premium Package (Pulse Shape, MFC-R2, Frame Relay, and VT-100 software option included)

Accessories included with any package

AC power adapter with plug kit (USA, UK, Australia, Europe)

4 x AA NiMH batteries

CD-ROM (including PC utility, USB driver, and User Guide)

1 x RJ48-to-RJ48 cable

1 x USB cable

Small carrying bag

Optional Accessories

E1 Cables

K1597	RJ48 to CF Y cable (120 Ω balanced)
CB-44995	RJ48 to Dual BNC cable (75 Ω unbalanced)
CB-0045402	2M External Clock Reference cable

Datacom Cables

CB-44391	X.21 10M DTE/DCE Emulate (Support up to 10 Mb/s)
CB-44346	X.21 Monitor
CB-44385	V.24 DTE/DCE Emulate
CB-44348	V.24 Monitor
CB-44389	V.35 DTE/DCE Emulate
CB-44341	V.35 Monitor
CB-44388	V.36 DTE/DCE Emulate
CB-44347	V.36 Monitor
CB-21118474	68-pin MDR to Bananas
CB-21128081	68-pin MDR to DB15 (CB-2118474 and CB-21128081 for G.703 Codirectional, Contradirectional, and Centralized interface testing)

Miscellaneous

CC-120101	Large Carrying Bag
AC-009801	Large Strand Hook
SCACARCHARGER	Car Adapter Charging Kit
ML-21107607	Printed User Manual SC E1 (English)
ML-21121114	Printed SC E1 Remote Control Reference Guide (English)

Software Options

CSC-E1-PS	Pulse Shape
CSC-E1-SIG	MFC-R2
CSC-E1-FR	Frame Relay
CSC-E1-VT100	VT-100
CSC-E1-RC	Remote Control

Test & Measurement Regional Sales

NORTH AMERICA TOLL FREE: 1 866 228 3762 FAX: +1 301 353 9216	LATIN AMERICA TEL: +55 11 5503 3800 FAX: +55 11 5505 1598	ASIA PACIFIC TEL: +852 2892 0990 FAX: +852 2892 0770	EMEA TEL: +49 7121 86 2222 FAX: +49 7121 86 1222	www.jdsu.com/test
---	--	---	---	---